

## **Industrial Rental AC Unit** with Cooling, Heating & Dehumidification Modes



**General** 

Manufacturer
Unit Model Number
Duct/Hose Connections
Unit Dimensions
Unit Ship Weight

Smart Family of Cooling Products SACP39A-HS (2) 20" Supply / (3) x 20" Return 117"L x 72"W x 99-3/4"H 5,300 lbs

## **Electrical**

Certification
Single Point Power Supply
Connections
Cooling Amps
Heating Amps
Dehumidification Amps
Unit MCA (DH)
Unit MFS (DH)
Generator Size
Generator Size

UL Listed components


460V/3PH/60HZ

Single point Series 16 Cam-Lok connections

68.5 A (460V) 143 A

188.5 A 228 A 250 A

68kW (cooling only)
144kW (heating & cooling)

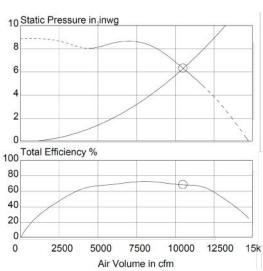


Email: info@coldairrentals.com Tel: 888-341-4585



## Package A/C Unit with Heat

## **Unit Features**

- (1) 30HP Scroll Compressor
- Direct drive High Static plenum fan with 20hp TEFC motor
- Maximum rated static pressure of 8.6 in-wg
- Rated cooling air flow of 10,500 cfm
- Air flow range of 5,000 12,500 cfm
- Hydrophilic coated, non-lanced condenser fins
- Hydrophilic coated evaporator fins
- Stainless steel hardware
- Stainless Steel drain pan
- Phase monitor and Incorrect phase indicator light (red)
- Circuit Breakers on all motors
- Blower VFD with inline starter and bypass switch
- Speed Potentiometer for Blower VFD to adjust speed from 30Hz to 69Hz
- High and low pressure safety switches
- R-410a refrigerant
- Hot dipped galvanized, full tubular rental frame with fork pockets & tie-down points
- Overhead certified lift frame
- Entering and leaving air temperature sensors
- Unit can run in COOLING/HEATING or DH modes
  - o Cooling unit may run in HAND (manual) MODE of LOCAL (via PLC control) MODE
    - Unit can control off supply or return air temperature via RS/SA switch
  - ✓ In DH mode both stages of cooling and 1 stage heat may operate simultaneously
- Duct Doors factory installed for all supply/return connections
- Integral 96 KW electric heating section featuring:
  - Stainless steel finned tubular heating elements
  - o 3 independent heating stages
  - o Independent contactor, hard wired overload, and circuit breaker for each stage

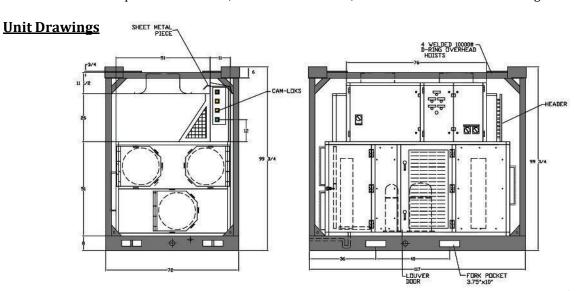

**Get In Touch** 

Email: info@coldairrentals.com Tel: 888-341-4585